

# 4-Wire Conventional Heat Detector

User's Manual

V1.0.1

the paper manual, CD-ROM, QR code or our official website. If there is inconsistency between paper manual and the electronic version, the electronic version shall prevail.

- All the designs and software are subject to change without prior written notice. The product updates might cause some differences between the actual product and the manual. Please contact the customer service for the latest program and supplementary documentation.
- There still might be deviation in technical data, functions and operations description, or errors in print. If there is any doubt or dispute, we reserve the right of final explanation.
- Upgrade the reader software or try other mainstream reader software if the manual (in PDF format) cannot be opened.
- All trademarks, registered trademarks and the company names in the manual are the properties of their respective owners.
- Please visit our website, contact the supplier or customer service if there is any problem occurring when using the device.
- If there is any uncertainty or controversy, we reserve the right of final explanation.

## Important Safeguards and Warnings

This section introduces content covering the proper handling of the device, hazard prevention, and prevention of property damage. Read carefully before using the device, comply with the guidelines when using it, and keep the manual safe for future reference.

### Operation Requirements



- Make sure that the power supply of the device works properly before use.
- Transport, use and store the device under allowed humidity and temperature conditions.
- Prevent liquids from splashing or dripping on the device. Make sure that there are no objects filled with liquid on top of the device to avoid liquids flowing into it.
- Do not disassemble the device.

### Installation Requirements



- WARNING**
- Strictly abide by local electrical safety standards, and make sure that the voltage in the area is steady and conforms to the power requirements of the device.
  - Do not connect the device to more than one power supply. Otherwise, the device might become damaged.



- Observe all safety procedures and wear required protective equipment provided for your use while working at heights.
- Do not expose the device to direct sunlight or heat sources.
- Do not install the device in humid, dusty or smoky places.
- Install the device in a well-ventilated place, and do not block the ventilator of the device.

### Maintenance Requirements



- Use the accessories suggested by the manufacturer. Installation and maintenance must be performed by qualified professionals.
- Clean the device with a soft dry cloth or a clean soft cloth dipped in neutral detergent.
- Contact your local dealer or the service center nearest to you if the device needs internal configuration or maintenance. Do not dismantle or modify the device without a qualified professional present to avoid the risk of danger or damage to the device. We will assume no responsibility for any problems caused by unauthorized modifications or maintenance.

## ZHEJIANG HUAXIAO TECHNOLOGY CO.,LTD.

Address: Area A, Floor 3, Building C, No.28 Dongqiao Road, Dongzhou Sub-district, Fuyang District, Hangzhou City, Zhejiang Province, China  
 Website: <https://en.wisualarm.com/en/home>

## Foreword

### General

This manual introduces the functions and operations of the 4-Wire Conventional Heat Detector (hereinafter referred to as "the Device").

### Safety Instructions

The following categorized signal words with defined meaning might appear in the manual.

Signal Words	Meaning
DANGER	Indicates a high potential hazard which, if not avoided, will result in death or serious injury.
WARNING	Indicates a medium or low potential hazard which, if not avoided, could result in slight or moderate injury.
CAUTION	Indicates a potential risk which, if not avoided, could result in property damage, data loss, lower performance, or unpredictable result.
TIPS	Provides methods to help you solve a problem or save you time.
NOTE	Provides additional information as the emphasis and supplement to the text.

### About the Manual

- The manual is for reference only. If there is inconsistency between the manual and the actual product, the actual product shall prevail.
- We are not liable for any loss caused by the operations that do not comply with the manual.
- The manual would be updated according to the latest laws and regulations of related jurisdictions. For detailed information, refer to

# 1 Product Information

## 1.1 Introduction


DHI-HY-C136-RE 4-Wire Conventional Heat Detector (hereinafter referred to as "the detector") is a component of the fire automatic alarm system. This detector analyzes the real-time data transmitted by a thermistor temperature sensor. It sends out a fire alarm signal after analyzing the ambient temperature through an intelligent algorithm. The detector needs to be connected to a fire alarm control panel. It is suitable for apartments, hotels, teaching buildings, office buildings, banks, libraries, warehouses, computer rooms, communication machine rooms, archives, and other industrial and civil buildings.

## 1.2 Features

- Reliable communication: Completes EMC test, it has strong anti-electromagnetic interference ability, high stability and reliability
- Accurate detection: Rate of rise & fixed temperature algorithm satisfies a variety of complex scenarios
- Flexible installation: Non-loosening screws on base terminal for easy installation
- High endurance: Contacts material is highly acid-resistant and rust-resistant
- Relay output: The output status can be controlled through a relay.


## 1.3 Dimension

Figure 1-1 Dimension [mm (inch)]

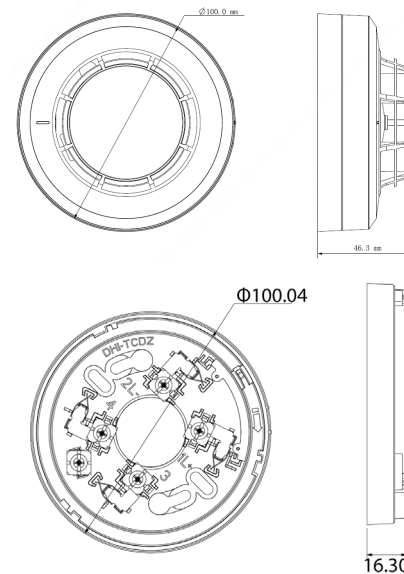

Parameter	Introduction
Communication Wiring	
Wiring	Four-wire
Environment	
Operating Temperature	-10°C to +55°C (+14°F to +131°F)
Storage Temperature	-20°C to +65°C (-4°F to +149°F)
Operating Humidity	≤ 95% RH (no condensation)
Construction	
Color	White
Dimensions (with base)	Φ100 mm × 46.3 mm (Φ 3.94" × 1.82") (with base) Φ100 mm × 35 mm (Φ 3.94" × 1.38") (without base)
Weight (with base)	98.6 g (0.217 lb) (with base) 61.5 g (0.136 lb) (without base)
Relay Output	1A 30VDC

## 2.2 Configuration jumpers

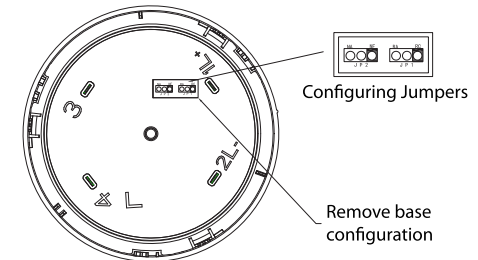

**Attention:** Jumpers JP1 and JP2 change the operation of the detector reset and dry contact output.

JP1	RC	Central reset: the detector maintains its alarm status until the central unit reset by interrupting its power supply.
	RA	Automatic reset: the detector automatically resets its alarm status as soon as the alarm stimulus (smoke or temperature) ceases to exist.
JP2	NA	Normally open: the detector keeps the dry contact output open in a normal (non-alarmed) state, closing it when it enters an alarm state.
	NF	Normally closed: the detector keeps the dry contact output closed in a normal (non-alarmed) state, opening it when it enters an alarm state.

**Default Configuration:RC,NA**



When use the relay function, please ensure that the device driven by the relay does not share a common ground with the current device.

# 2 Technical Information

## 2.1 Technical parameters

Parameter	Introduction
Electrical	
Working Voltage	DC16V~DC28V
Current	<ul style="list-style-type: none"> <li>● Standby current: ≤ 60uA</li> <li>● Alarm current: ≤ 20mA</li> </ul>
Indicator	Red LED <ul style="list-style-type: none"> <li>● Polling: Flash every 6 seconds</li> <li>● Alarm: Remain lit</li> <li>● Fault: Flash every 2 seconds</li> </ul>

# 3 Device Installation

## 3.1 Packing List

Check the quantity and model. If you find device damage or any loss, contact the after-sales service.

## 3.2 Installation Steps

### Prerequisites

- Determine the location, mounting height and numbers for mounting the device in the protection area according to the construction drawing and relevant regulations.
- Before installation, an insulation test is necessarily required. The insulation resistance between the buses should be greater than


20KΩ, and the insulation resistance of the bus to the ground should be greater than 20MΩ. It is strictly forbidden to use a megger to test the insulation resistance after completing installation.

- Disconnect the power supply of the device before installation. Ensure the correct wiring and firm connection.
- Use RVS twisted pairs with a section area of 1.5 mm<sup>2</sup> or 1.0 mm<sup>2</sup> for the signal buses.
- Do not install smoke detector here:
  - ◇ Kitchens, boiler rooms, and other damp areas.
  - ◇ Dusty areas or places attract insects.
  - ◇ Next to air conditioner, fan, air vent or other similar ventilation openings.
  - ◇ Near obstructed areas.

## Procedure


Step 1 Use two M4 screws to fix the device base on the embedded box or designated position, and make sure the matched mounting base has been firmly installed.

Figure 3-1 Installation (1)

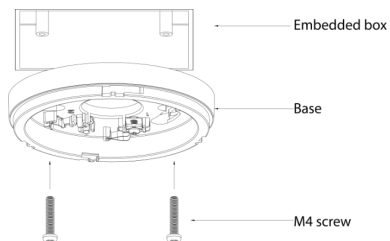

Step 2 Use dry contacts with positive and negative signals for installation. Connect the terminals and fix to the base allation using dry contact with positive or negative signal. Connect terminals and fix on the base.

Figure 3-2 Wiring

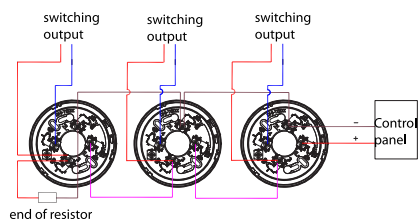

**Attention:** The maximum voltage of 30 V and the maximum current of 1 A must be observed when using the outputs to drive loads from an external power supply. If the voltage or current used exceeds the specified values, the product may be damaged.

Step 3 Mount the device into the base by aligning them together and twisting the unit clockwise until it is firmly locked.

Figure 3-3 Installation (2)



Step 4 After all devices are installed and checked, connect the power supply of the Fire Alarm Control Panel.



The number of devices that can be connected varies depending on the model of the conventional control panel. When connecting to a conventional control panel, it supports simultaneous alarm activation for at least 2 conventional smoke detectors.

## 4 FAQ

Problem	Solutions
The indicator light of the detector does not light up.	Check whether the device is installed in place; if it is installed correctly, check the circuit, measure and ensure that the voltage of the equipment signal line is DC 16V-DC 28V
The indicator light of the detector is constantly on, and Conventional Fire Alarm Control Panel reports a false fire alarm	Check whether there are interference sources such as steam and dust near the device
The indicator light of the detector flashes quickly, and the screen of Conventional Fire Alarm Control Panel displays "Failure"	Due to corrosion, drop, violent impact, etc., the sensor has a short circuit or open circuit failure, please contact the professionals

## 5 Test and Maintenance

### 5.1 Test

- After installation and register, test the detector by using a smoke blowing. When ambient smoke concentration reaches the alarm threshold, the indicator will turn to steady lighting and Fire Alarm Control Panel will simultaneously give alarm information.
- After completing the alarm test, reset the Fire Alarm Control Panel and restore to the normal operation.

### 5.2 Maintenance

To keep your device in good working condition, please follow these requirements.

- Simulate alarm test: Test the device once half a year (recommended).
- Before testing or maintaining, inform the proper authorities that the system is undergoing maintenance and will temporarily be put out of service.